



UHWK
POV PLAYER CAMERA

H O W T O



Page 1: Getting Started

Page 2: Upload/View Content

Page 3: Customize Settings



GETTING STARTED



TO GET STARTED turn the Power Switch (1) to the 'ON' Position. The camera will begin recording once the UHWK Logo (4) lights up RED as seen in the photo above. You must ensure there is an SD card inserted in the camera's micro-SD slot (2).

IF CAMERA DOES NOT RECORD it may mean that your camera is not charged. To charge; connect the USB adapter to the charging port (3). The UHWK logo (4) will light up BLUE when charging. The light will turn OFF when charging is complete.



UPLOAD/VIEW CONTENT



Plug your UHWK into your computer and wait for a new drive to populate your desktop. Find the UHWK drive on your computer and there you will find all of your videos stored.

Open them up using your favorite video viewing software



CUSTOMIZE SETTINGS

To Customize Camera Settings:
Click on the 'Settings.txt' document found found within your UHWK drive when plugged into the computer.

The following options will be available to customize:

- Exposure (1 - 12)
- Light Frequency (50Hz or 60Hz)
- Video Quality (720P or 1080P)
- RTC Display (On or Off)
- Buzzer (On or Off)
- Audio (On or Off)

Set the 'Update' field to 'Y' for Yes and hit save on your txt document